



Adjustable Platform Ladder Operating Instructions



There are four locating pins on the ladder. The locating pins lock the inner and outer ladder sections and allow the user to adjust the height of the ladder.

Prior to climbing the ladder, all four locating pins must be correctly engaged.

To release (unlock) the locating pins:

To release the locating pins, securely hold the inner ladder section and pull the locating pin out and turn slightly so it sits against the outer ladder stile (refer Figure A). Keeping firm hold of the inner ladder section, repeat for the locating pin on the other side of the sliding section. Once released, the height will be able to be adjusted.

Note: do not release all four locating pins at the same time. Adjust one sliding section first and engage its pins, before releasing and adjusting the other section.



Figure A



To engage (lock) the locating pins:

Line up the hole on the outer leg section with the round hole of the inner section and fully insert the locating pins on each side (refer Figure B).

Note: It is important to ensure the pins are fully inserted through both the outer and inner sections of the ladder.



WARNING



**ENSURE ALL FOUR LOCATING PINS
ARE FULLY ENGAGED BEFORE USING
THE LADDER.**

Adjusting the ladder height:

Important: maintain a firm hold of the inner ladder section before releasing the locating pins, and at all times while adjusting the ladder height. Keep body parts clear of sliding steps and rungs during adjustment.

To adjust the height of the ladder, pull both locating pins out of the rung holes on one sliding section of the ladder to unlock. Rest both locating pins on the side of the outer ladder (refer Figure A). Firmly grasping the inner ladder section, carefully adjust the outer side rail to your desired height, ensuring the holes in the inner and outer sections align. Engage both locating pins through the holes in the inner and outer sections (refer Figure B). Repeat the process to adjust the height on the other half of the ladder. Check all four locating pins to ensure correct engagement of each pin.

Note: you must ensure the platform is engaged and completely level before climbing the ladder.

For storage and/or transport, it is recommended to return the ladder to its lowest position and engage the locating pins to secure the ladder adjustment.